

SHOP MANUAL

3940005 04.02



EXHAUSTO

Replacement of RS 009-016 Motor

All work should be done by a qualified Mechanical Contractor.

This repair requires working knowledge of electricity, electrical wiring, motors and hand tools. If you are unsure about your ability to perform this repair, contact a Mechanical Contractor.

The Fan Motor and Impeller are heavy, assistance may be required in carrying and installing them.

EXHAUSTO Motor Replacement Kit

- A. High Temperature Grease
- B. 1/2" x 2 1/4" Steel Dowel
- C. 3 mm Allen Wrench



 


Tools Required

- A. #3 Phillips Head Screwdriver
- B. Metric Wrench Set (8,10,13)
- C. Gear Puller

A.

- D. Metric Socket Set (optional)
- E. Pickle Fork (RS016 only)



1.) Switch off and tag out the power supply to the fan.




2.) Note the location of the wires. Disconnect and remove the wires from the junction box.

Refer to wiring diagram on page 4.



3.) Loosen and remove the 2 hinge bolts

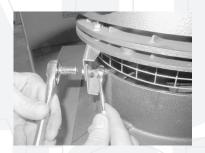





4.) Loose the locking screw.



5.) Carefully remove the motor and fan assembly.



6.) Remove the 3 bolts holding the top cover onto the motor base and remove the top cover. Note the location of the motor wires and the top cover.



7.) Note location of fan on motor shaft. Using a 3 mm allen wrench, loosen the 2 set screws that hold the fan on the motor shaft.



8.) For the RS 016 only: Note location of spacer ring and plates.





9.) Using a gear puller and a 1/2 x 2 1/4 steel extension dowel, pull the fan from the motor shaft.



10.) Remove the 2 nuts and bolts holding the hinge plate and the cooling plate to the motor plate.



11.) Remove the front positioning bolt and spacer.



12.) Remove the cooling plate from the motor plate.



13.) Remove the motor mounting screws from the motor plate.





14.) RS 016 only: Loosen the set screw on the shaft extension.




15.) RS 016 only: Using a pickle fork, leverage the shaft extension from the motor shaft.



16.) Reassemble fan in reverse order. Apply a light coat of antiseize grease to motor plate, shaft extension and shaft.



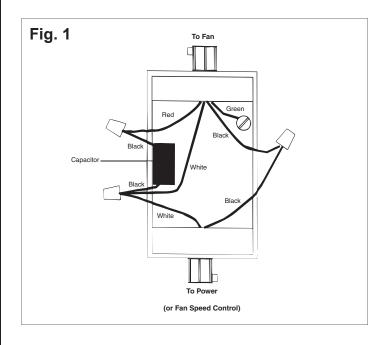

For Technical Assistance, please call: (800) 255-2923

